

Intuitive Integration Quick Reference Card

PowerScribe® 360 | Reporting (version 2.0 and higher) Optional Feature

NOTE: Nuance employees are not authorized to adjust or configure the settings on a customer's PACS. The customer, or the customer's PACS representative, must make any necessary changes to the PACS configuration or settings.

Feature Overview

NOTE: This integration operates in **Slave Mode only**.

Slave Mode

- Mark exam as dictated/read.
- Launch *PowerScribe 360 | Reporting* using PACS work list.
- PACS and *PowerScribe 360 | Reporting* are installed on separate machines.

Multiple Sites and Multiple Integrations



- If the system has multiple *sites* and the integration type is master, duplicate the master mode integration under each site. If the integration type is slave do not set up duplicate integrations under each site. Set up all slave integrations under the primary site (first site created). When a user logs in, no matter what site they are working under, the system will read the slave integrations created under the primary site and confirm the workstation is set up with the correct directory structures.
- If there are multiple *integrations* on a system, and more than one uses file drop integration such as XML, you will need to ensure that each file drop integration drops files into, or reads files from, separate sub folders under **c:\Nuance** on the client workstation.

For example, an organization using both GE and Hologic might consider using the following paths:

- C:\Nuance\GE\
- C:\Nuance\Hologic\

Site PACS Settings

This integration operates in Slave Mode only and should contain the entries shown below. If you are unsure of what to enter, contact your PACS vendor.

1. Go to **Setup > Sites > PACS** section.
2. Click the **Edit**  icon for the PACS you want to configure as Slave (or click the **Add**  icon to create a new PACS entry).
3. From the **Type** drop-down list, select **Dynamic Imaging**.
4. In the **Name** field, type **Intuitive**. (The **Description** field is optional, but we recommend giving this a name, such as **Intuitive Slave** to distinguish it from other entries.)
5. In the **Mode** section, select **Slave**.
6. In the **Slave** text field, enter **5500**. **Do not enter anything except those port numbers.**

This page intentionally left blank.